


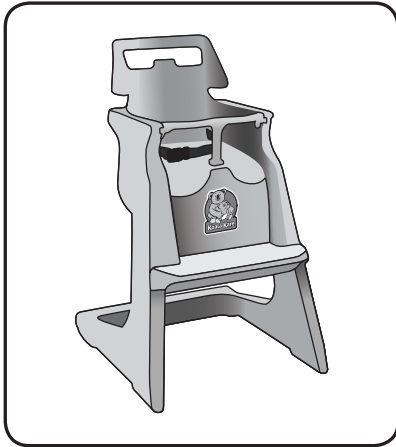

The Classic High Chair Usage Instructions

P/N KB103

Please Note: This product is designed to be used by an infant or child capable of sitting upright and unassisted. Waist restraint should be buckled at all times when in use.



WARNING:

- Prevent serious injury or death from falls or sliding out.
- The child should be secured in the high chair at all times by the restraining system.
- Never leave child unattended.
- The child should be secured in the high chair at all times by the restraining system.
- It is recommended that the high chair be used only by children capable of sitting upright and unassisted.

You are responsible for the safe operation of this unit.

Inspection Criteria


A properly maintained unit:

Has both ends of a functioning, non-frayed strap.
Buckle clicks when closed and is attached at both ends on seat back.
Has an intact warning label affixed to the seat back. (If damaged or unreadable, please replace.)

To order replacement parts call 888.733.3456 or 303.539.8300 or visit www.koalabear.com.

Restraint Usage

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place with an audible “click”.

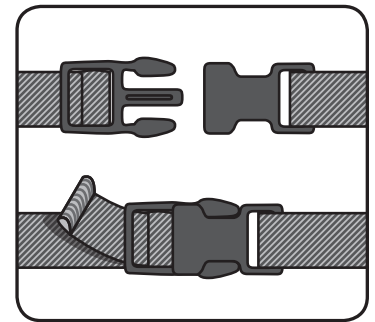

The waist restraint can be adjusted to make the strap tighter or looser.

Maintenance

Clean and sanitize regularly. Wipe down high chair with a soft rag using a non-abrasive cleaner.

Important: DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.

Koala Kare Products A Division of Bobrick
6982 South Quentin St., Centennial, CO 80112-3945

Main 303.539.8300 **Toll Free** 888.733.3456
Fax 303.539.8399 **Koalabear.com**

P/N 940 - April 2017