


The Classic High Chair Tray Usage Instructions

P/N KB104

Please Note: The Classic High Chair is designed to be used by an infant or child capable of sitting upright and unassisted. Waist restraint should be buckled at all times when in use.

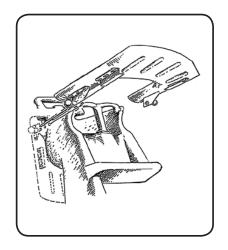

A WARNING:

- Prevent serious injury of death from falls or sliding out. Always use the restraint system.
- The child should be secured in the high chair at all times by the restraining system.
- The tray is not designed to hold the child in the chair.
- It is recommended that the high chair be used only by children capable of sitting upright and unassisted.
- Never leave child unattended.

You are responsible for the safe operation of this unit.

Tray Instructions

The tray can be attached to (and removed from) the high chair by pulling out both ends of the round side latches at the same time, and sliding the tray in (or out) of tray notches.


The tray may be stored on the back of the high chair by utilizing the latches and holes. Do not stack chairs with trays stored in this manner.

For correct installation, the metal brackets on the bottom of the tray must engage the notched areas on each side of the high chair.

To order replacement parts call 888.733.3456 or 303.539.8300 or visit www.koalabear.com.

Restraint Usage

To fasten the waist strap, push spring tabs into the buckle receptacle until both lock in place with an audible "click".

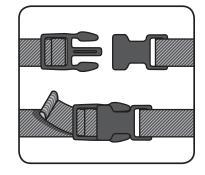

The waist restraint can be adjusted to make the strap tighter or looser.

Maintenance

Clean and sanitize regularly. Wipe down tray with a soft rag using a non-abrasive cleaner.

Important: DO NOT USE BLEACH on this product. May cause discoloration. Use of bleach on this product will void warranty. Do not use abrasive cleaners as they can scratch the product.

Koala Kare Products A Division of Bobrick 6982 South Quentin St., Centennial, CO 80112-3945

Fax 303.539.8399

Main 303.539.8300 Toll Free 888.733.3456 Koalabear.com