




## KB327 Replacement Strap Instructions

P/N 440-KIT


**Hardware Included:**  
Barrel (2pc) Cap (2 pc)

**Tools Required:**  
Pliers

1. Turn the BoosterChair upside-down, with the back of the chair towards you. The two ends of the strap should be visible on the inside of the back wall of booster.

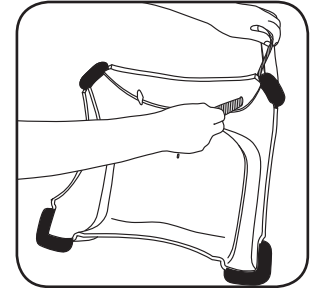


2. Take one end of the strap and pull it into the cavity under the chair about 2". Cut off the folded end of the strap.

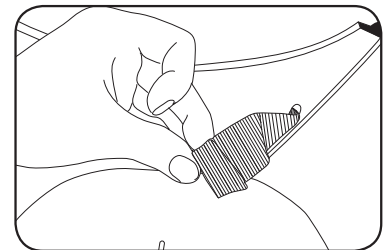


3. Repeat step 2 for the other side of the strap. Remove and discard the old strap.


3. Take the new strap and unclip it so that your right hand is holding the side connected to the male half of the buckle. Put the other side of the strap down for now.

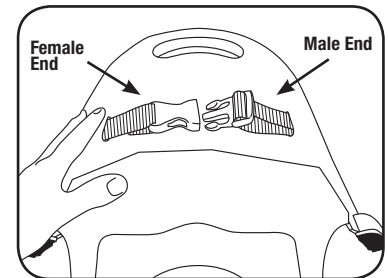

4. On the end of the strap opposite the buckle, there is a stitched fold. Position the fold so it is on the right side of the strap (facing the right arm of the chair). Pinch the end of the strap so it is flat and insert it through the slot on the right side of the back of the chair. Ensure that you push the fold completely through the slot.

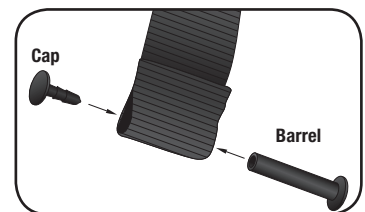

5. Once the fold is through the slot, insert the plastic barrel through the fold entirely. Place the plastic cap into the opening in the barrel. Using a pair of pliers, apply pressure until the cap is fully inserted into the barrel. Do not use excessive force as to avoid breaking the plastic barrel.

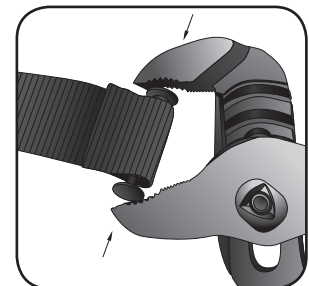

6. Repeat the previous 2 steps to install the female end of the strap to the left slot on the chair.

7. Ensure the strap is buckled, clean the chair and return it to use.

**Koala Kare Products** A Division of Bobrick  
6982 South Quentin St., Centennial, CO 80112-3945

**Main** 303.539.8300 **Toll Free** 888.733.3456  
**Fax** 303.539.8399 **Koalabear.com**

P/N 267 - August 2019