



KB102 Replacement Strap Instructions

P/N 725-KIT

Hardware Included:





Truss Head Wood Screw (2pc)

Modified Truss Head Wood Screw (1pc)

Tools Required:

Phillips Head Screwdriver

1. Remove the Child Protection Seat (CPS) from the wall or partition by unscrewing the mounting screws.
2. Unclip the buckle. Using a Phillips Head Screwdriver, remove the two screws securing the female section of the buckle to the seat. Remove and discard the strap and screws.
3. On the right side of the strap (as you look at the seat) there is a threaded buckle. Unthread the loose end of the strap from the buckle.
4. On the seat back there is a small screw securing the strap to the seat. Remove this screw using a Phillips Head Screwdriver and discard it. You should now be able to pull the strap through the slots in the seat back and remove it from the seat.
5. Take the new strap and thread it through the slot on the left side of the seat back (as you look at it) and then through the right side slot from the back of the seat. Make sure not to twist the strap.
6. There will be a small slot in the strap that is now located on the back of the seat back. Using the Modified Truss Head Screw, secure the strap to the seat back through the slot in the strap and the screw hole in the seat back.
7. With the free end of the strap, thread the buckle on the strap making sure not to twist the strap. The free end of the strap should end up on top of the strap.
8. The small section of strap connected to the female end of the strap can now be threaded through the slot in the seat. Thread the strap from the inside of the seat to the outside of the seat.
9. Using the two Truss Head Wood Screws, secure the strap through the two eyelets in the strap to the corresponding screw holes in the seat.
10. Using the mounting hardware that was removed in step one, remount the CPS following the proper installation instructions that were provided with your unit.

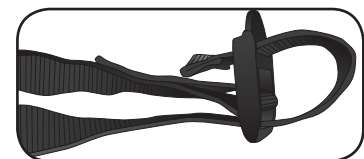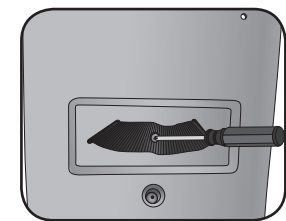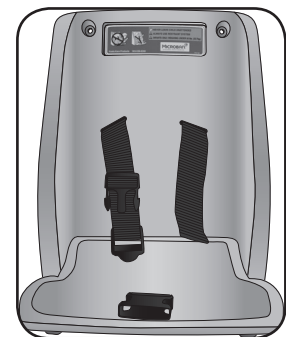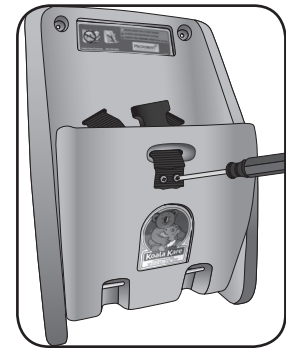

Koala Kare Products A Division of Bobrick
6982 South Quentin St., Centennial, CO 80112-3945

Main 303.539.8300 **Toll Free** 888.733.3456
Fax 303.539.8399 **Koalabear.com**

P/N 322 - October 2018